

# **Electronic Demand Classic Series**

Model NST25CD

**AUTOMATIC WATER CONDITIONER**

**Installation**

**Operation**

**Maintenance**

**Repair Parts**

**IF YOU HAVE QUESTIONS  
WHEN INSTALLING,  
OPERATING AND MAINTAINING  
YOUR CONDITIONER, AND  
WHEN SETTING THE TIMER. . .**

**CALL TOLL FREE**

**1 - 800 - 972 - 0135**

# ☆NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

---

## WARRANTY



### TEN YEAR LIMITED WARRANTY WARRANTY POLICY

North Star Water Conditioning, St. Paul, MN, warrants this water conditioner as stated herein:

From the date of installation, within the warranty period described below, we will repair or replace any part which we find defective because of faulty materials and workmanship, or corrosion. You pay only freight to our factory and local labor charges.

\* ONE YEAR ON COMPLETE UNIT

\*THREE YEARS ON ELECTRONIC CONTROL \* THREE YEARS ON CONTROL VALVE BODY

\* FIVE YEARS ON SALT STORAGE TANK \* TEN YEARS ON MINERAL TANK, EXCLUDING MINERAL

## GENERAL CONDITIONS

Damage to any part of this water conditioner because of misuse, misapplication, neglect, alteration, accident, installation or operation contrary to our printed instructions, or damage caused by any unusual force of nature such as, but not limited to, freezing, flood, hurricane, tornado, or earthquake is not covered by this warranty. In all such cases, regular parts and service charges will apply.

We assume no warranty liability in connection with this water conditioner other than specified herein. This warranty is in lieu of all other warranties, expressed or implied, including warranties of fitness for a particular purpose. We do not authorize any person or representative to assume for us any other obligations on the sale of this water conditioner.

Should a defect or malfunction occur, contact your contractor. If you are unable to contact your contractor, return the part, freight prepaid, directly to the factory at the address below. Enclose with the part a full description of the problem, with your name, full address, date purchased, model and serial numbers, and selling contractor's name and address. We will repair or replace the part and return it to you at no cost if our repair department determines it to be defective under the terms of the warranty.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

This water conditioner is manufactured by North Star Water conditioning, PO Box 64310, St. Paul, MN 55164-4310; customer information telephone no. 1-800-972-0135.



## SAFETY GUIDES

FOLLOW THE INSTALLATION INSTRUCTIONS CAREFULLY. FAILURE TO INSTALL THE SOFTENER PROPERLY VOIDS THE WARRANTY.

BEFORE YOU BEGIN INSTALLATION, READ THIS ENTIRE MANUAL. THEN, OBTAIN ALL THE MATERIALS AND TOOLS YOU WILL NEED TO MAKE THE INSTALLATION.

**CHECK LOCAL PLUMBING AND ELECTRICAL CODES. THE INSTALLATION MUST CONFORM TO THEM.** CODES IN THE STATE OF MASSACHUSETTS REQUIRE INSTALLATION BY A LICENSED PLUMBER. FOR INSTALLATION, USE PLUMBING CODE 248-CMR OF THE COMMONWEALTH OF MASSACHUSETTS.

**USE ONLY LEAD-FREE SOLDER AND FLUX FOR ALL SWEAT-SOLDER CONNECTIONS, AS REQUIRED BY STATE AND FEDERAL CODES.**

USE CARE WHEN HANDLING THE SOFTENER. DO NOT TURN UPSIDE DOWN, DROP, OR SET ON SHARP PROTRUSIONS.

DO NOT LOCATE THE SOFTENER WHERE FREEZING TEMPERATURES OCCUR. DO NOT ATTEMPT TO TREAT WATER OVER 120°F. **FREEZING, OR HOT WATER DAMAGE VOIDS THE WARRANTY.**

AVOID INSTALLING IN DIRECT SUNLIGHT. EXCESSIVE SUN HEAT MAY CAUSE DISTORTION OR OTHER DAMAGE TO NON-METALLIC PARTS.

THE SOFTENER REQUIRES A MINIMUM WATER FLOW OF 3 GALLONS PER MINUTE AT THE INLET. **MAXIMUM ALLOWABLE INLET WATER PRESSURE IS 125 PSI.** IF DAYTIME PRESSURE IS OVER 80 PSI, NIGHTTIME PRESSURE MAY EXCEED THE MAXIMUM. USE A PRESSURE REDUCING VALVE IF NECESSARY. (ADDING A PRESSURE REDUCING VALVE MAY REDUCE THE FLOW.)

**THE SOFTENER WORKS ON 24 VOLT-60 Hz ELECTRICAL POWER ONLY.** BE SURE TO USE THE INCLUDED TRANSFORMER AND PLUG IT INTO A NOMINAL 120V, 60 CYCLE HOUSEHOLD OUTLET THAT IS GROUNDED AND PROPERLY PROTECTED BY AN OVER CURRENT DEVICE SUCH AS A CIRCUIT BREAKER OR FUSE. IF TRANSFORMER IS REPLACED, USE ONLY THE AUTHORIZED SERVICE, CLASS II, 24 VOLT, 10 VA TRANSFORMER.

THIS SYSTEM IS NOT INTENDED TO BE USED FOR TREATING WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM.

## UNPACKING / INSPECTION

The softener is shipped in one master carton. The softener is completely assembled at the factory, except as required at installation.

Be sure to check the entire softener for any shipping damage or parts loss. Also note damage to the shipping carton. Contact the transportation company for

all damage and loss claims. The manufacturer is not responsible for damages in transit.

Small parts, needed to install the softener, are on a skin packed cardboard piece. To avoid loss of the small parts, keep them on the skin pack until you are ready to use them.

## TABLE OF CONTENTS

	<b>PAGE NO.</b>
WARRANTY, SAFETY GUIDES .....	2
SPECIFICATIONS, DIMENSIONS .....	4
BEFORE STARTING INSTALLATION .....	5
TYPICAL INSTALLATION ILLUSTRATION .....	6
INSTALLATION STEPS .....	7 - 9
PROGRAMMING THE TIMER	
ELECTRONIC DEMAND .....	10 - 11
SANITIZING PROCEDURES .....	12
WATER AND WATER CONDITIONING .....	13 - 14
HOW THE WATER SOFTENER WORKS .....	14 - 15
GENERAL WATER SOFTENER MAINTENANCE .....	16 - 17
ELECTRONIC DEMAND TIMER FEATURES AND SERVICE	
TIMER DISPLAYS / OPTIONAL RECHARGE CONTROLS, PROGRAM MEMORY, AUTOMATIC ELECTRONIC DIAGNOSTICS .....	18 - 19
SERVICE CHECKOUT PROCEDURES, WIRING SCHEMATIC .....	19 - 21
WATER FLOW THROUGH VALVE .....	22 - 23
REPAIR PARTS .....	24 - 27
RETURN PARTS TAGS .....	28

# ★NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## DESIGN SPECIFICATIONS


	MODEL NST25CD
RATED CAPACITY	See Rating Decal, Located On The Softener
RATED EFFICIENCY (GR/LB at 2.3 lb salt dose) ●	5064
AMOUNT OF HIGH CAPACITY RESIN (lbs / cu ft)	40 / .77
RESIN TANK NOMINAL SIZE (in., dia x height)	8 x 40
SERVICE FLOW RATE (gpm)	See Rating Decal
PRESSURE DROP AT SERVICE FLOW RATE (psi)	14.6
WATER SUPPLY MAXIMUM HARDNESS (gpg) ◆	70
WATER SUPPLY MAX. CLEAR WATER IRON (ppm) ◆	5
WATER PRESSURE LIMITS (min. / max. psi)	20 - 125
WATER TEMPERATURE MIN. -MAX. (°F)	40 - 120
WATER SUPPLY MINIMUM FLOW RATE (gpm)	3
REGENERATION CYCLE FLOW RATES (gpm)	
FILL (flow to brine tank)	.3
BRINING	.15
BRINE RINSE	.10
MAX. BACKWASH	2.2
MAX. FAST RINSE	2.2

● The efficiency rating is only valid at the stated salt dose. This softener was efficiency rated according to NSF/ANSI Standard 44.

◆ Determined by water analysis from a qualified water testing laboratory.

NOTE: This system conforms to NSF/ANSI Standard 44 for the specific performance claims as verified and substantiated by test data.

## DIMENSIONS

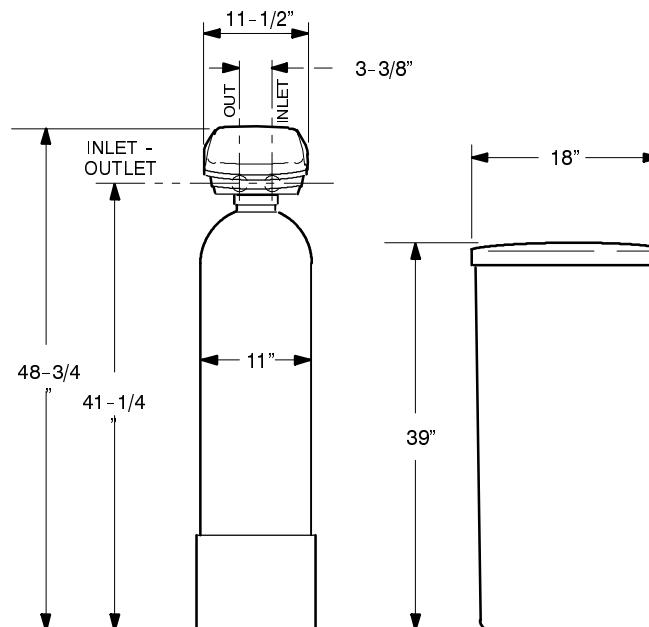

## BEFORE STARTING INSTALLATION

### ► WHERE TO INSTALL THE SOFTENER

- Place the softener as close as possible to the pressure tank (well system) or water meter (city water).
- Place the softener as close as possible to a floor drain, or other acceptable drain point (laundry tub, sump, standpipe, etc.).
- Connect the softener to the main water supply pipe BEFORE or AHEAD OF the water heater. **DO NOT RUN HOT WATER THROUGH THE SOFTENER.** Temperature of water passing through the softener must be less than 120°F (49°C).
- Keep outside faucets on hard water to save soft water and salt.
- Do not install the softener in a place where it could freeze. **Damage caused by freezing is not covered by the warranty.**
- Put the softener in a place water damage is least likely to occur if a leak develops. The manufacturer will not repair or pay for water damage.
- A 120 volt electric outlet, to plug the included transformer into, is needed within 10 feet of the softener. The transformer has an attached 10 foot power cable. **Be sure the electric outlet and transformer are in an inside location, to protect from wet weather.**
- If installing in an outside location, you must take the steps necessary to assure the softener, installation plumbing, wiring, etc., are as well protected from the elements, contamination, vandalism, etc., as when installed indoors.
- **Keep the softener out of direct sunlight.** The sun's heat will melt plastic parts.

### ► TOOLS, PIPE and FITTINGS, OTHER MATERIALS YOU WILL NEED

- In and out pipes to the softener must be at least 3/4" size. Some local codes require a minimum of 1" pipe size. *To plumb with 1" pipes, buy adaptors to fit the 1" pipe threads on the installation adaptors or bypass valve (see page 6).* You should maintain the same, or larger, pipe size as the water supply pipe, up to the softener inlet and outlet.
- Use copper, brass, or galvanized pipe and fittings. Some codes may also allow CPVC plastic pipe.
- ALWAYS install a bypass valve or valves. Either use an optional valve or 3 shut-off valves. Bypass valves let you turn off water to the softener for repairs if needed, but still have water in the house pipes.
- Drain hose (3/8" or 7/16" inside diameter) is needed for valve and salt tank drains. You can buy good quality, thick-wall, flexible hose at most hardware stores.
- If a rigid valve drain is needed, to comply with plumbing codes, you can buy the parts needed (see page 8) to connect a 1/2 in. copper tubing drain.
- Nugget or pellet water softener salt is needed to fill the brine tank (see page 9 and 16).

### ► PLAN HOW YOU WILL INSTALL THE SOFTENER

You must first decide how to run in and out pipes to the softener. Look at the house main water pipe at the point where you will connect the softener. Is the pipe soldered copper, glued plastic, or threaded galvanized? What is the pipe size?

Now look at the typical installation illustration on page 6. Use it as a guide when planning your particular installation. **Be sure to direct raw, hard water to the softener valve inlet fitting.** The valve is marked IN and OUT.

# ★NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## TYPICAL INSTALLATION ILLUSTRATION

(BRINE TANK NOT SHOWN)

**SOLDERED COPPER, OR CPVC**


SOFT WATER

HARD WATER TO OUTSIDE FAUCETS

HARD WATER

**A** ... TO OPTIONAL BYPASS VALVE AT SOFTENER

**B** ... TO INSTALLATION ADAPTORS (included) AT SOFTENER, USING 3-VALVE BYPASS

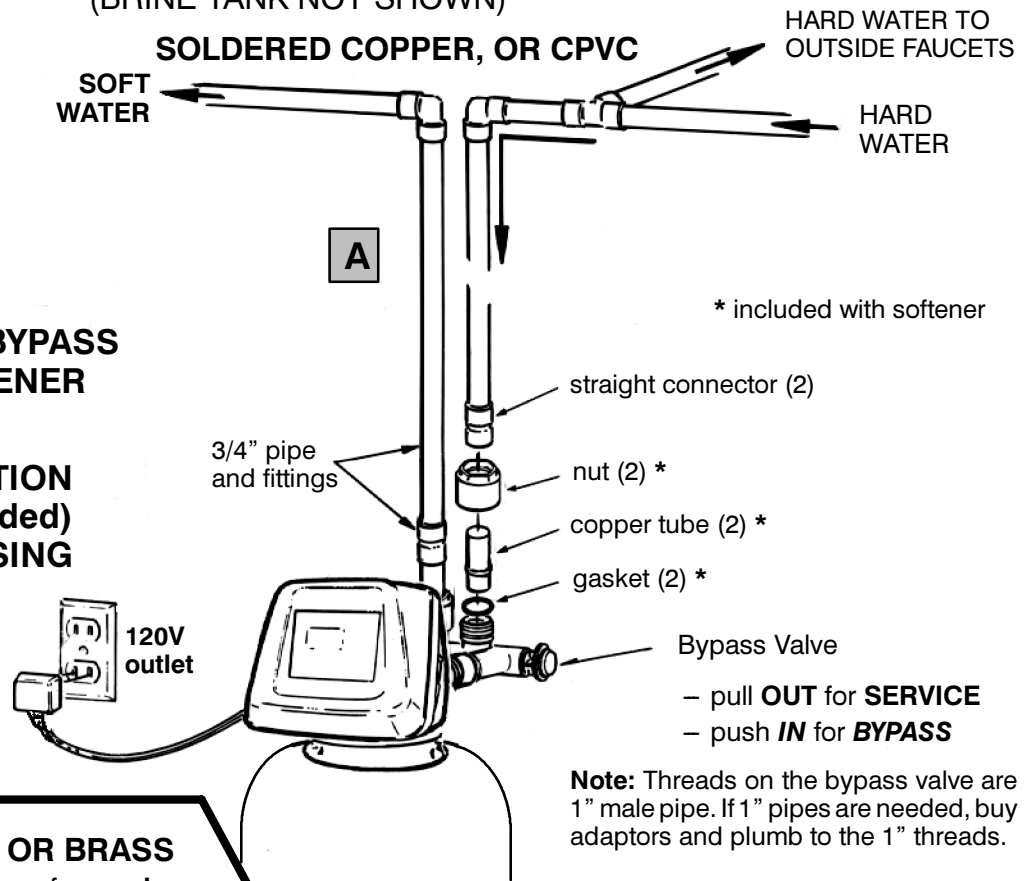

## THREADED GALVANIZED OR BRASS

BYPASS – close for service  
VALVE – open for bypass

SOFT WATER

HARD WATER TO OUTSIDE FAUCETS

HARD WATER



shutoff valve (3)

OUTLET VALVE

- open for service
- close for bypass

INLET VALVE

- open for service
- close for bypass

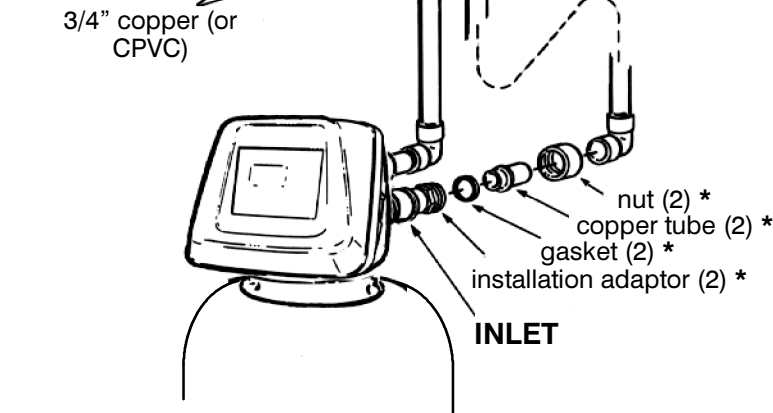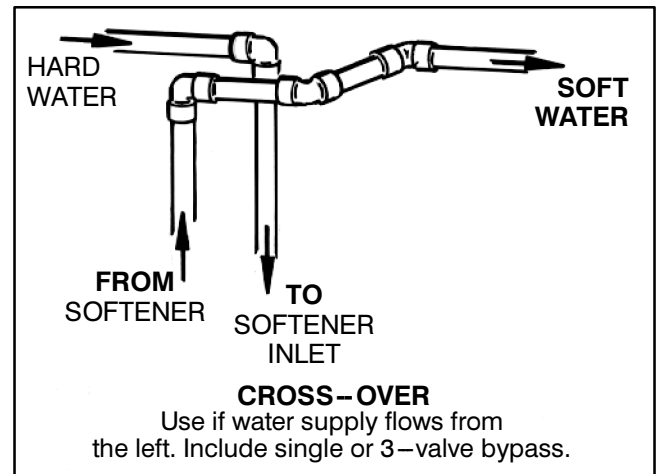


\* included with softener

**Note:** Threads on the installation adaptors are 1" male pipe. If 1" pipes are needed, buy adaptors and plumb to the 1" threads.

## INSTALLATION STEPS

### 1. INSTALL INLET-OUTLET ADAPTORS, OR BYPASS VALVE:

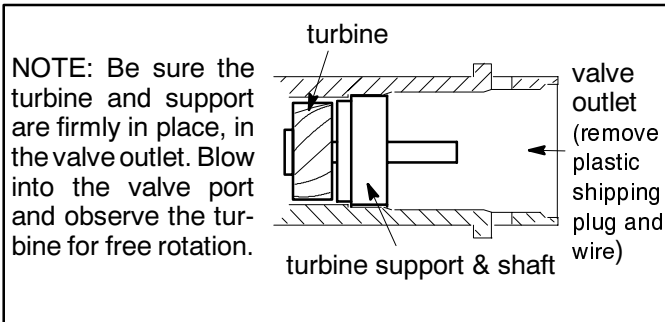

► Push the adaptors (lubricate o-ring seals) into the valve inlet and outlet ports...figure 1A.

- OR -

► Push the bypass valve (lubricate o-ring seals) into both ports of the valve...figures 1A and 1C.

► Snap the two large plastic clips in place, from the top, down...figures 1A and 1B. **Be sure they snap into place. Pull on the adaptors, or bypass valve, to make sure they held securely in place.**

### 2. INSTALL THE BRINE TANK OVERFLOW FITTINGS:

► Insert the rubber grommet into the 3/4" diameter hole in the brine tank sidewall...see page 8.

► Push the barbed end of the hose adaptor elbow into the grommet.

### 3. MOVE THE RESIN TANK INTO INSTALLATION POSITION:

► Be sure the installation surface is level and smooth. If needed, place the tank on a section of 3/4" thick (min.) plywood. Then, place shims under the plywood as needed to level the softener.


### 4. PLUMB IN AND OUT PIPES TO AND FROM SOFTENER:

**CAUTIONS:** Observe all of the following cautions as you connect inlet and outlet plumbing.

► **Turn off the house water supply valve and open faucets to relieve pressure in the pipes.**


► **BE SURE RAW, HARD WATER IS DIRECTED TO THE VALVE INLET PORT.**

FIGURE 1

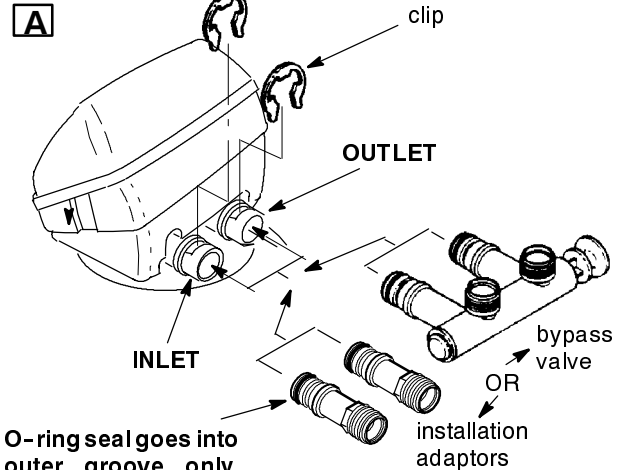


**Note:** Threads on the installation adaptors or bypass valve are 1" male pipe. If 1" pipes are needed, buy adaptors and plumb to the 1" threads.

**B**

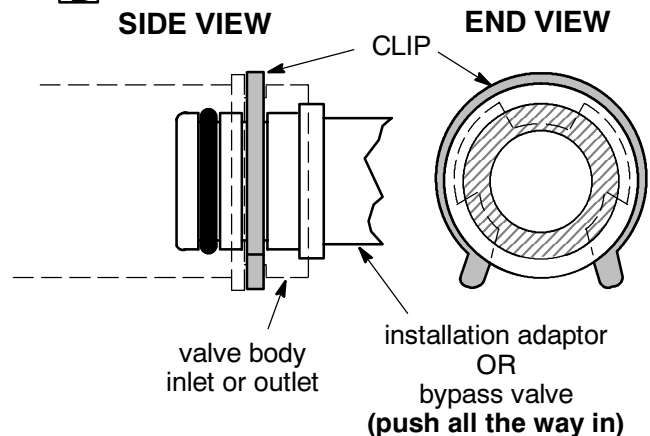

**C**

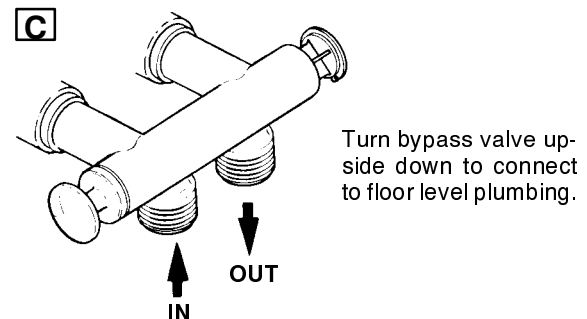

► Be sure to use bypass valve(s).

► If making a soldered copper installation, **do all sweat soldering before connecting pipes to the softener fittings.** Torch heat will damage plastic parts.

continued

## INSTALLATION STEPS, continued

- ▶ Put grounding clamps (see step 8) on copper tubes before soldering.
- ▶ When turning threaded pipe fittings onto plastic fittings, use care not to cross-thread.
- ▶ Use pipe joint compound on all external pipe threads.
- ▶ Support inlet and outlet plumbing in some manner (use pipe hangers) to keep the weight off of the valve fittings.

### 5. CONNECT AND RUN THE VALVE DRAIN HOSE:

- ▶ Take a length of 3/8" or 7/16" inside diameter hose and attach to the valve drain fitting. So water pressure does not blow the hose off, use a hose clamp to secure in place.

- ▶ Locate the other end of the hose at a suitable drain point...floor drain, laundry tub, etc. **Check and comply with local codes.**


IMPORTANT: Use high quality, thick-wall hose that will not easily kink or collapse. *The water softener will not work if water cannot exit this hose during regenerations.*

- ▶ Tie or wire the hose in place at the drain point. Water pressure will cause it to whip during the backwash and fast rinse cycles of regeneration. Also provide an air gap of at least 1-1/2" between the end of the hose and the drain point. An air gap prevents possible siphoning of sewer water, into the softener, if the sewer should "back-up".

- ▶ If raising the drain hose overhead is required to get to the drain point, **do not raise higher than 8' above the floor.** Elevating the hose may cause a back-pressure that could reduce brine draw during regenerations.

### 6. CONNECT AND RUN THE BRINE TANK OVERFLOW HOSE (see figure 3):


NOTE: Move the brine tank into installation location, next to the resin tank.

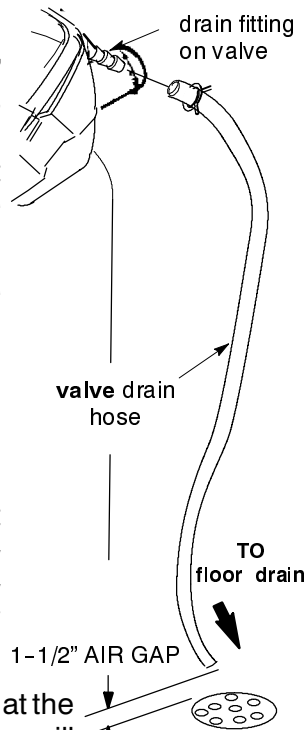

### CONNECTING A RIGID VALVE DRAIN TUBE

To adapt a copper drain tube to the softener, use a hacksaw to cut the barbed end from the drain fitting as shown. Buy a compression fitting (1/4" female pipe thread x 1/2" O.D. tube) and needed tubing from your local hardware store.

FIGURE 2

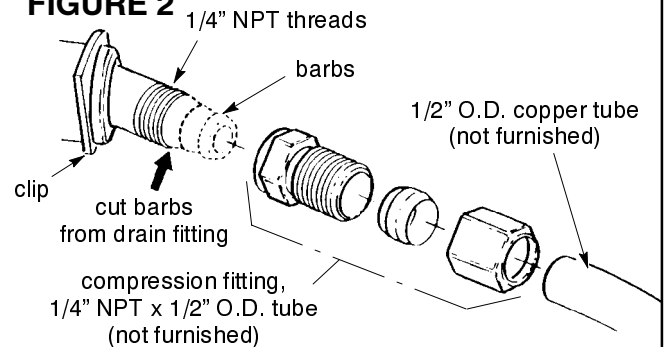

- ▶ Attach a length of 3/8" or 7/16" I.D. hose to the drain elbow, installed in step 2, page 7. Use a hose clamp to hold it in place.


- ▶ Locate the other end of the hose at the drain point. **DO NOT ELEVATE THIS HOSE HIGHER THAN THE ELBOW ON THE BRINE TANK. DO NOT TEE THIS HOSE TO THE VALVE DRAIN HOSE.**

NOTE: This drain is for safety only. If the brine tank should over-fill with water, the excess is carried to the drain.

### 7. CONNECT BRINE TUBING:

- ▶ Route the brine tubing out, through the largest hole in the brine tank sidewall. Connect the tubing to the nozzle housing, as shown in figure 3, using a nut-ferrule. Tighten the nut, by hand only.

FIGURE 3

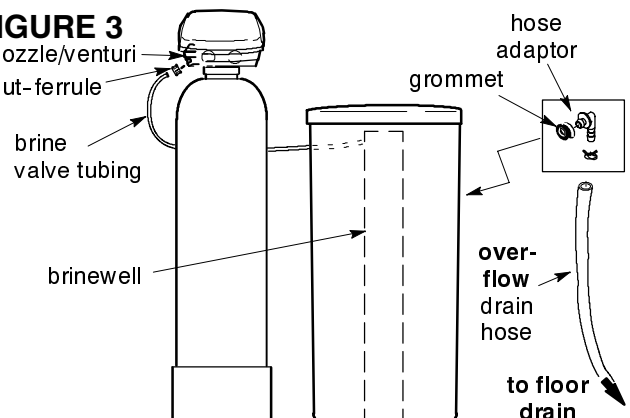


## INSTALLATION STEPS, continued

### 8. INSTALL GROUNDING CLAMPS AND WIRE (IF NEEDED):

► To maintain electrical ground continuity in the house cold water piping, install the included ground clamps as shown. Be sure the pipes are clean, under the clamps, to assure good contact.

NOTE: A 3-valve bypass system maintains ground continuity.

**FIGURE 4**

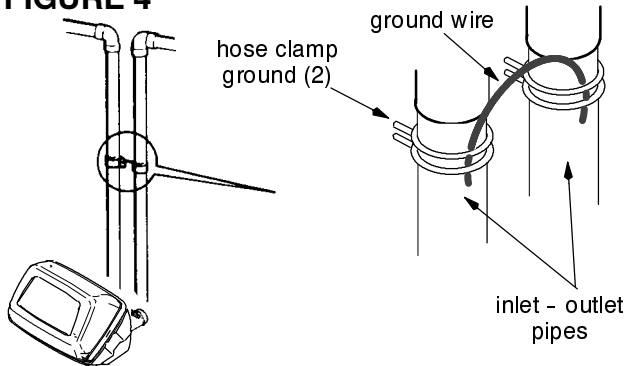

### 9. FLUSH PIPES, EXPEL AIR FROM SOFTENER, AND TEST YOUR INSTALLATION FOR WATER LEAKS:

**CAUTION: To avoid water or air pressure damage to softener inner parts, be sure to do the following steps exactly as listed.**

**A.** Fully open two cold, **soft** water faucets nearby the softener.

**B.** Place bypass valve(s) in “**bypass**” position. On a single valve, slide the stem into BYPASS. On a 3-valve system, close the inlet and outlet valves, and open the bypass valve...see page 6.

**C.** Fully open the house main water pipe shutoff valve. Observe a steady flow from both opened faucets.

**D.** Place bypass valve(s) in “**service**”, **EXACTLY** as follows. **KEEP SOFT WATER FAUCETS OPEN.**

**1. SINGLE BYPASS VALVE:** **SLOWLY**, slide the valve stem toward “service”, pausing several times to allow the softener to pressurize slowly.

**2. 3-VALVE BYPASS:** Fully close the bypass valve and open the outlet valve. **SLOWLY**, open the inlet valve, pausing several times to allow the softener to pressurize slowly.

**E.** After about three minutes, open a **HOT** water faucet for one minute, or until all air is expelled, then close.

**F.** Close both cold water faucets.

**G.** Check your plumbing work for leaks and fix right away, if any are found. **BE SURE TO OBSERVE PREVIOUS CAUTION NOTES.**

**H.** Turn on the gas or electric supply to the water heater. Light the pilot, if applicable.

### 10. ADD WATER AND SALT TO THE BRINE TANK:

► Remove the salt storage area cover. Add about three gallons of water into the tank. **DO NOT ADD INTO THE BRINEWELL.**

► \*Fill the tank with NUGGET, PELLET or coarse SOLAR water softener salt. **Do not use** rock, block, granulated, and ice cream making salts, or **salt with iron removing additives**. Also see page 16. *Salt storage capacity* is 200 lbs or more (varies by model).

\*Note: If the softener is installed in a humid basement or other damp area, it is better to fill the tank more often using less salt (see salt bridging in the maintenance section). Eighty to 100 lbs of salt will last for several months, depending on water hardness, family size, and model of softener.

### 11. CONNECT TO ELECTRICAL POWER:


► The softener works on 24 volt, 60 Hz electric power. The included transformer changes standard 120 volt AC house power to 24 volts. **Plug the transformer into a 120 volt outlet only.** Be sure the outlet is always “live” so it can not be switched off by mistake.

Plug the transformer into the electrical outlet.

### 12. PROGRAM THE TIMER:

► **ELECTRONIC DEMAND TIMER**...see pages 10 and 11.

## PROGRAMMING THE ELECTRONIC DEMAND TIMER

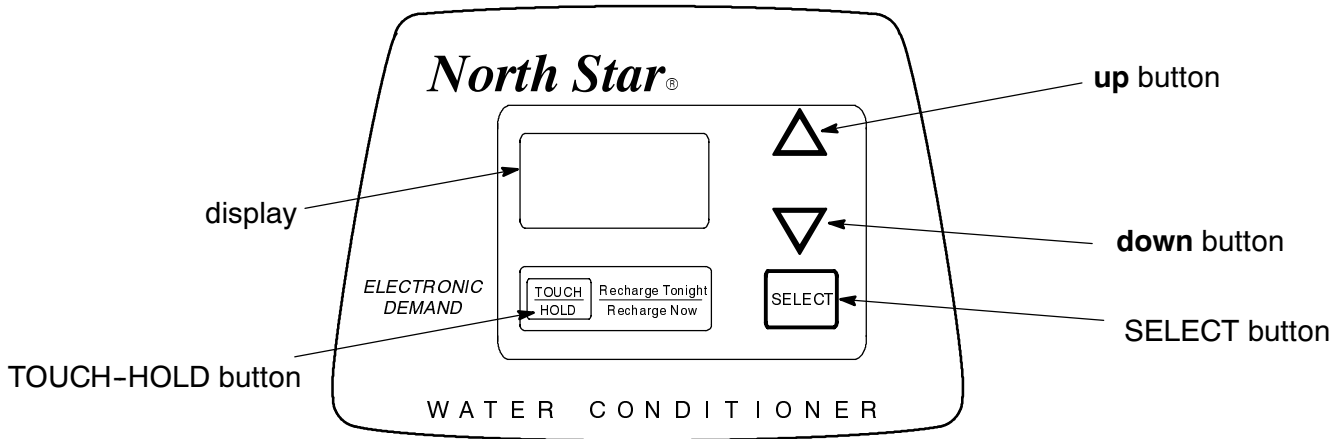

► **TIMER SETTINGS REQUIRED**...upon installation, and after an extended power outage (see Program Memory, page 18).

**NOTES:**

- WHEN THE TRANSFORMER IS PLUGGED INTO THE ELECTRICAL OUTLET (STEP 11, PAGE 9), **12:00AM** (flashing), and **PRESENT TIME** show in the display area. Program the timer as instructed below. **If SR - - is flashing**, use the UP  $\Delta$  button to set the correct SR code to **SR22** for the NST25CD model. If you pass by the correct code number, use the DOWN  $\nabla$  button. Then, press the SELECT button and program the timer below. ...*If the wrong SR code shows for your model*, see Manual Initiated Electronic Diagnostics on pages 19 and 20.
- A “beeper” sounds while pressing buttons for timer programming. One beep signals a change in the timer display. Repeated beeps means the timer will not accept a change from the button you have pressed, and you should use another button.
- To set the timer, you will use the UP  $\Delta$  , DOWN  $\nabla$  and SELECT buttons.

► **SET PRESENT TIME OF DAY**

NOTE: If the words PRESENT TIME do not show in the display, press the SELECT button until they do.

1. Press the UP or DOWN button to set. The UP button moves the display ahead; the DOWN moves the time backward.....

NOTE: Each press of the buttons changes the time by one minute. Holding the buttons in changes the time 32 minutes each second.

2. When the present time shows, press SELECT to set.

If the present time is between noon and midnight, be sure PM shows.



If the present time is between midnight and noon, be sure AM shows.



**TIMER SETTINGS CONTINUED, NEXT PAGE**



## SANITIZING PROCEDURES

Care is taken at the factory to keep your water softener clean and sanitary. Materials used to make the softener will not infect or contaminate your water supply, and will not cause bacteria to form or grow. However, during shipping, storage, installing and operating, bacteria could get into the softener. For this reason, sanitizing as follows is suggested<sup>①</sup> when installing.

1. Be sure to complete all installation steps, including timer programming.
2. Pour about 3/4 oz of common 5.25% household

bleach (Clorox, Linco, Bo Peep, White Sail, Eagle, etc.) **into the brinewell** (figure 3, page 8).

3. Use the REGENERATE, OR RECHARGE, NOW feature, on the timer, to start an immediate regeneration. The bleach is drawn into and through the water softener to sanitize it. This sanitizing regeneration is over in about two hours. Then, **soft water** is available for your use.

<sup>①</sup> NOTE: Sanitizing is recommended by the Water Quality Association for disinfecting. On some water supplies, they suggest periodic sanitizing.

NOTE: When the above sanitizing regeneration is over, your house COLD water supply is fully soft immediately. However, **your water heater is filled with hard water** and, as hot water is used, it will refill with soft water. When all the hard water is replaced, in the water heater, hot only, and mixed hot and cold water will be fully soft. If you want totally soft water immediately, after the above regeneration, drain the water heater until the water runs cold. **If you do drain the water heater, use extreme care as the water could cause severe burns.**

## WATER AND WATER CONDITIONING

### WATER .....

Man's very existence depends on water. It is one of the basic commodities of life. Water is best as nature provides it, is a common misconception. Practically all natural water needs refinement or treatment to make it safe to drink or more satisfactory to use.

The earth's water supply cycle starts in the upper cloud layers. As it falls to the earth as rain or snow, it picks up impurities and gases from the atmosphere. Landing on earth, it seeps over and through the ground, dissolving earth minerals. Passing through limestone, it dissolves calcium and magnesium, the hardness minerals. Iron deposits impart iron to the water. Acidity and sediments are other water conditions.

### WATER CONDITIONING .....

Water conditioning is the treatment of four general conditions. These are: *Hardness, Iron, Acidity, Sediments.*

**HARDNESS** is a term to describe the presence of calcium and magnesium minerals in water. A chemical analysis accurately measures the amount of minerals in grain weight. For example, one gallon of water with 5 grains per gallon (gpg) hardness has dissolved minerals, that if solidified, about equals the size of one ordinary aspirin tablet. One gallon of water, 25 gpg hard, has a mineral content equal in size to 5 aspirin tablets. Water hardness varies greatly across the country. It generally contains from 3 to 100 gpg.

Hard water affects living in general. Hardness minerals combine with soap to make a soap curd. The curd greatly reduces the cleaning action of soap. Precipitated hardness minerals form a crust on cooking utensils, appliances, and plumbing fixtures. Even the tastes of foods are affected. A water softener removes the hardness minerals to eliminate these problems, and others.

Sodium Information: Water softeners using sodium chloride (salt) for regeneration add sodium to the water. Persons on sodium restricted diets should consider the added sodium as part of their overall intake.

**IRON** in water is measured in parts per million (ppm). The total\* ppm of iron, and type or types\*, is

Municipal water supplies come from surface reservoirs, such as lakes and rivers, or from underground reservoirs. Usually, municipalities chlorinate the water to make it safe to drink. Sediment is removed by filtration. Tastes and odors are reduced or eliminated. The water is conditioned to comply with certain specifications. However, hardness minerals, tastes and odors are not always reduced to the most desirable levels.

Underground reservoirs provide our private water supplies. Because the water is raw and untreated, it can have varying amounts of hardness, iron, tastes, odors, acidity, or combinations of these. Different localities and water levels affect mineral content.

determined by chemical analysis. Four different types of iron in water are: ① Ferrous (clear water), ② Ferric (red water), ③ Bacterial and organically bound iron, ④ Colloidal and inorganically bound iron (ferrous or ferric).

\*Water may contain one or more of the four types of iron and any combination of these. Total iron is the sum of the contents.

① Ferrous (clear water) iron is soluble and dissolves in water. It is usually detected by taking a sample of water in a clear bottle or glass. Immediately after taking, the sample is clear. As the water sample stands, it gradually clouds and turns slightly yellow or brown as air oxidizes the iron. This usually occurs in 15 to 30 minutes. A water softener will remove moderate amounts of this type of iron (see specifications).

② Ferric (red water), and ③ Bacterial and organically bound irons are insoluble. This iron is visible immediately when drawn from a faucet because it has oxidized before reaching the home. It appears as small cloudy yellow, orange, or reddish suspended particles. After the water stands for a period of time, the particles settle to the bottom of the container. Generally these irons are removed from water by filtration. Chlorination is also recommended for bacterial iron.

④ Colloidal and inorganically bound iron is of ferric or ferrous form that will not filter or exchange out of

**continued**

## WATER AND WATER CONDITIONING, continued

water. In some instances, treatment may improve colloidal iron water, but always CONSULT A QUALIFIED WATER CHEMISTRY LAB before attempting to treat it. Colloidal iron water usually has a yellow appearance when drawn. After standing for several hours, the color persists and the iron does not settle, but remains suspended in the water.

Iron in water causes stains on clothing and plumbing fixtures. It negatively affects the taste of food, drinking water, and other beverages.

**ACIDITY** or acid water is caused by carbon dioxide, hydrogen sulfide, and sometimes industrial wastes. It is corrosive to plumbing, plumbing fixtures, water

heaters, and other water using appliances. It can also damage and cause premature failure of seals, diaphragms, etc., in water handling equipment.

A chemical analysis is needed to measure the degree of acidity in water. This is called the pH of water. Water testing below 6.9 pH is acidic. The lower the pH reading, the greater the acidity. A neutralizer filter or a chemical feed pump are usually recommended to treat acid water.

**SEDIMENT** is fine, foreign material particles suspended in water. This material is most often clay or silt. Extreme amounts of sediment may give the water a cloudy appearance. A sediment filter normally corrects this condition.

## HOW THE WATER SOFTENER WORKS

### SOFT WATER SERVICE, AND REGENERATION ...see illustrations, page 15

#### SERVICE

When the softener is providing soft water, it is called "Service". During service, hard water flows from the house main water pipe into the softener. Inside the softener resin tank is a bed made up of thousands of tiny, plastic resin beads. As hard water passes through the bed, each bead attracts and holds the hardness minerals. This is called ion-exchanging. It is much like a magnet attracting and holding metals. Water without the hardness minerals (soft water) flows from the softener and to the house pipes.

After a period of time, the resin beads hold all of the hardness minerals they can and cleaning is needed to remove them. This cleaning is called regeneration, or recharge. The demand timer automatically determines when regenerations occur. The solid state timer is programmed for regeneration days. Regeneration is started at 2:00 a.m. (factory setting) by the softener timer, and consists of five stages or cycles. These are: FILL, BRINING, BRINE RINSE, BACKWASH, and FAST RINSE.

#### REGENERATION

● **FILL:** Salt, dissolved in water, is called brine. Brine is needed to clean the hardness minerals from the resin beads. To make the brine, water flows into the

salt storage area during the fill stage as shown on page 15.

● **BRINING:** During brining, brine travels from the salt storage area, into the resin tank. Brine is the cleaning agent needed to remove the hardness minerals from the resin beads. The hardness minerals, and brine are discharged to the drain.

The nozzle and venturi create a suction to move the brine, maintaining a very slow rate to get the best resin cleaning with the least salt.

● **BRINE RINSE:** After a pre-measured amount of brine is used, the brine valve closes. Water continues to flow in the same path as during brining, except for the discontinued brine flow. Hardness minerals and brine flush from the resin tank, to the drain.

● **BACKWASH:** During backwash, water travels *up* through the resin tank at a fast flow rate, flushing accumulated iron, dirt, and sediments from the resin bed and to the drain.

● **FAST RINSE:** Backwash is followed by a fast flow of water *down* through the resin tank. The fast flow flushes brine from the bottom of the tank, and packs the resin bed.

After fast rinse, the softener returns to soft water service.

### AUTOMATIC HARD WATER BYPASS DURING REGENERATION .....


For emergency needs, **hard** water is available to the home during the regeneration cycles. However,

you should avoid using HOT water because the water heater will refill with the hard water.


# ☆ NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## WATER FLOW THROUGH SOFTENER


### SOFT WATER SERVICE

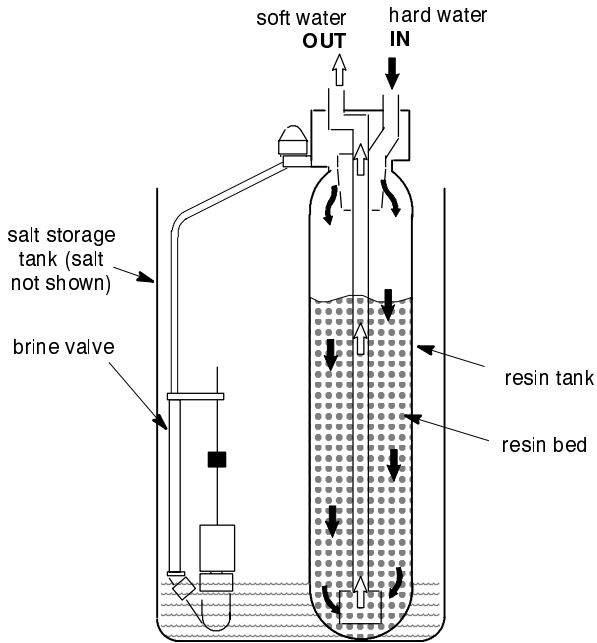


### FILL

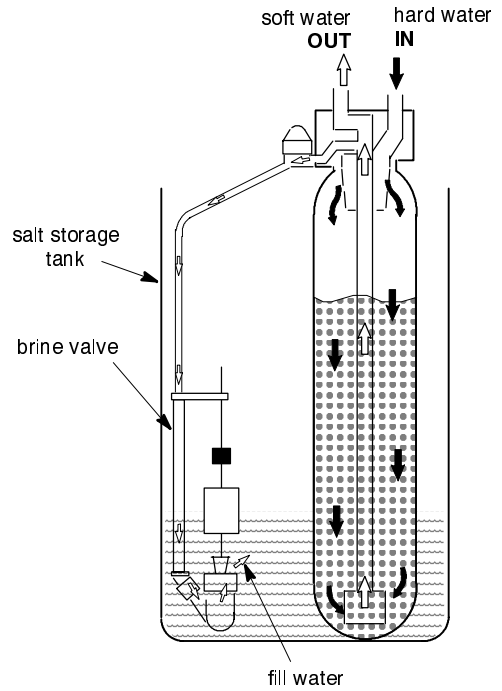


### BRINING / BRINE RINSE

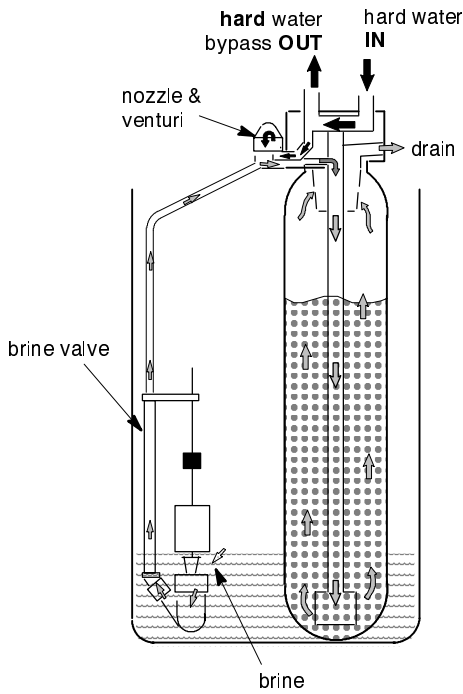

### BACKWASH

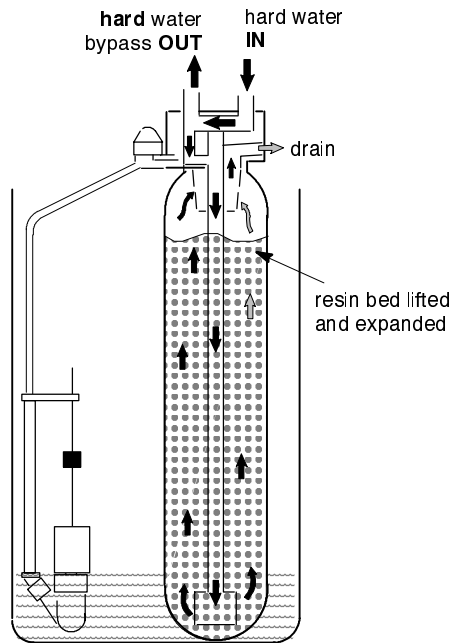

### FAST RINSE

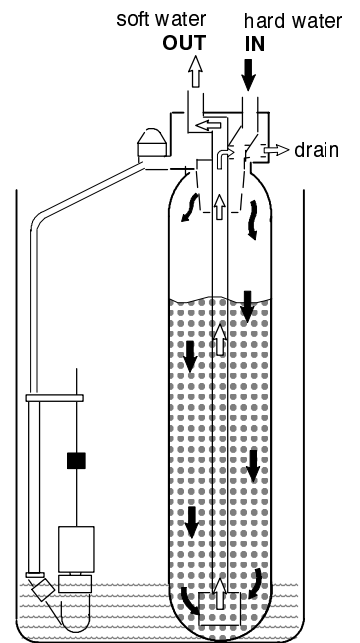

## GENERAL WATER SOFTENER MAINTENANCE

### CHECKING THE SALT STORAGE LEVEL, AND REFILLING .....

Brine (salt dissolved in water) is needed for each and every regeneration. The water for making brine is metered into the salt storage area by the softener valve and timer. However, **you must keep the tank full of salt.**

*WHEN TO REFILL WITH SALT: Check the salt level a few weeks after you install the softener and every week after that. Refill when the brine tank is from 1/3 to 1/2 full. Never allow the softener to use all the salt before you refill it. Without salt, you will soon have hard water.*

Use clean water softener salts only, at least 99.5%

pure. NUGGET, PELLET or coarse SOLAR salts are recommended. Do not use rock, block, granulated, and ice cream making salts. They contain dirt and sediments, or mush and cake, and will create maintenance problems.

**NOTE: WATER SOFTENING SALT WITH IRON REMOVING ADDITIVES:** Some salts have an additive to help the softener handle iron in the water supply. Although this additive may help to keep the softener resin clean, it may also release corrosive fumes that weaken and shorten the life of some softener parts.


### BREAKING A SALT BRIDGE .....

Sometimes, a hard crust or salt bridge forms in the salt storage area. It is usually caused by high humidity or the wrong kind of salt. When the salt bridges, an empty space forms between the water and salt. Then salt will not dissolve in the water to make brine.

If the brine tank is full of salt, it is hard to tell if you have a salt bridge. Salt is loose on top, but the bridge is under it. The following is the best way to check for a salt bridge.

Salt should be loose all the way to the bottom of the tank. Take a broom handle, or like tool, and **carefully** push it down into the salt, working it up and down. If the tool strikes a hard object (be sure it's not the bottom or sides of the tank), it's most likely a salt bridge. Carefully break the bridge with the tool. **DO NOT** pound on the walls of the tank.

If the wrong kind of salt made the bridge, take it out. Then fill the tank with nugget or pellet salt only. In humid areas, it is best to fill with less salt, more often.

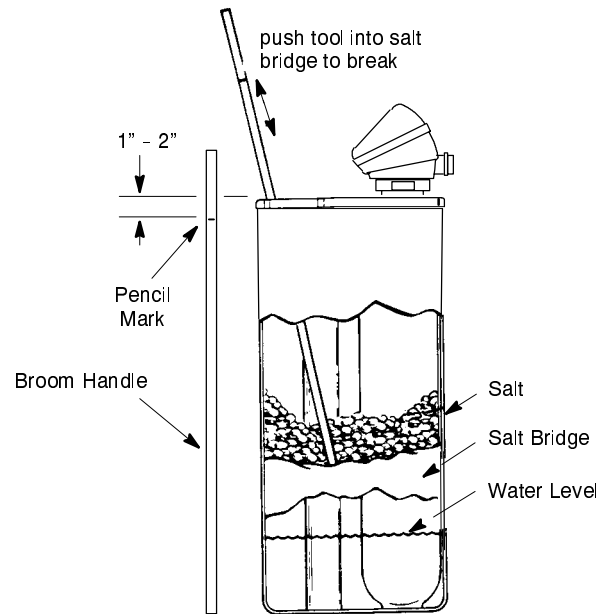

### CLEANING IRON OUT OF THE WATER SOFTENER .....

Your water softener takes hardness minerals (calcium and magnesium) out of the water. Also, it can control some (see specifications, page 4) "clear water" iron. With clear water iron, water from a faucet is clear when first put into a glass. After 15 to 30 minutes, the water begins to cloud or turn rust colored. A water softener **WILL NOT** remove any iron that makes the water cloudy or rusty as it comes from the faucet (called red water iron). To take red water iron out of water, or over the maximum of clear water

iron, an iron filter or other equipment is needed. Your local dealer has trained people to help you with iron water problems.

If your water supply has clear water iron, periodic resin bed cleaning is needed. Clean the bed at least every six months, or more often if iron appears in the soft water between treatments. Follow directions on the resin bed cleaner container.

# ☆NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## GENERAL WATER SOFTENER MAINTENANCE, continued


### CLEANING THE NOZZLE AND VENTURI ASSEMBLY .....

A clean nozzle and venturi is needed for the softener to work right. This small unit makes the suction to move brine from the salt storage area to the resin tank during regeneration. If it becomes plugged with sand, silt, dirt, etc., the softener will not work and you will get hard water.

To get to the nozzle and venturi, remove the softener top cover. Be sure the softener is in service cycle (no water pressure at nozzle and venturi). Then, while holding the nozzle & venturi housing with one hand, turn off the cap. Lift out the screen support and screen, then the nozzle and venturi. Wash and rinse the parts in warm water until clean. If needed, use a small brush to remove iron or dirt. Also check and clean the gasket.

NOTE: Some models have a small flow plug located in the nozzle and venturi, and/or a small cone shaped screen in the housing. Be sure to check and clean these parts, if your model is so equipped.

Carefully replace all parts in the correct order. Lubricate the o-ring seal with silicone grease and place in position. Install and tighten the cap, BY HAND ONLY. DO NOT OVER-TIGHTEN AND BREAK THE CAP OR HOUSING.

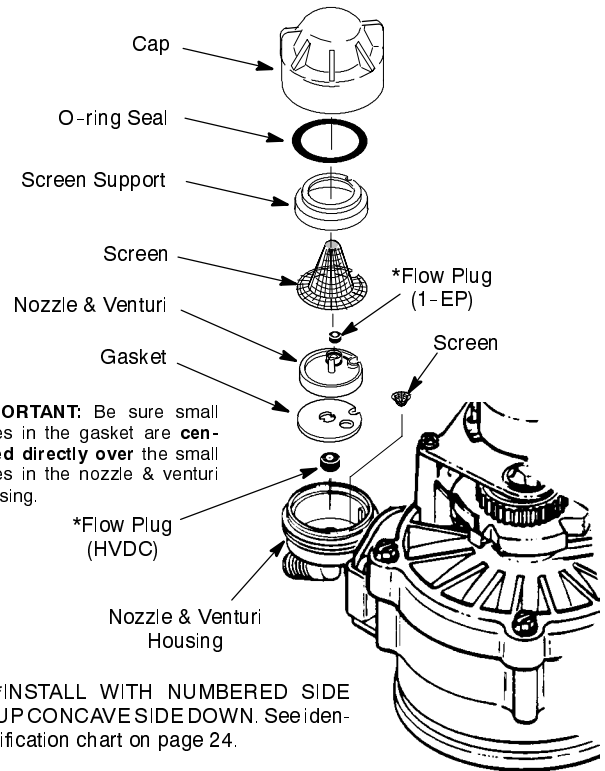

## SERVICE CHECKLIST

### NO SOFT WATER

**No salt in storage tank:** See page 16 to refill, then start a regeneration, or recharge.

**Transformer unplugged at wall outlet, or disconnected from timer:** Reconnect to electrical power and start a regeneration, or recharge.

**Fuse blown, circuit breaker popped, or circuit mistakenly switched off:** Check and resolve as needed. Then, start a regeneration, or recharge.

**Plumbing bypass valve(s) in "bypass" position:** Refer to page 6 and position valve(s) as needed to direct soft water to house pipes. Then, start a regeneration, or recharge.

**Timer not programmed:** See....  
Electronic Demand Timer - page 10.

### WATER INTERMITTENTLY HARD

**Nozzle & venturi dirty, or salt in storage tank bridged:** See page 16, and above to clean. Then, start a regeneration, or recharge.

**Possible increase in water hardness:** See....  
Electronic Demand Timer - page 11.

**Hot water used when softener is regenerating:** The water heater will refill with hard water... see Automatic Hard Water Bypass During Regenerations, page 14.


**Leaking faucet or toilet valve:** A small leak will waste hundreds of gallons of water in just a few days. Fix all water leaks immediately.

## ELECTRONIC DEMAND TIMER FEATURES, AND SERVICE


**NOTE: SEE PAGE 10 TO SET THE TIMER TO THE CORRECT TIME OF DAY, WATER HARDNESS NUMBER, AND RECHARGE START TIME.**

### **NORMAL OPERATION, TIMER DISPLAYS** .....

During normal operation, the present time of day, and AM or PM, show in the time display area. When the demand computer determines a regeneration is needed, RECHARGE TONIGHT begins to flash in the display, along with

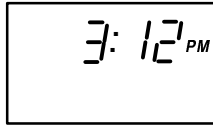

the present time. RECHARGE TONIGHT flashes until the next regeneration start time, then changes to RECHARGE NOW, which flashes until the regeneration is over.

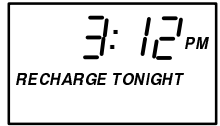

### **feature: OPTIONAL RECHARGE CONTROLS** .....


Sometimes, a manually started regeneration (recharge) may be desired, or needed. Two examples are:

... You have used more water than usual (house guests, extra washing, etc.) and you may run out of soft water before the next regeneration.

... You did not refill the storage tank with salt before it was all gone.


Use one of the following features to start a regeneration immediately, or at the next preset regeneration start time.

#### **RECHARGE NOW**

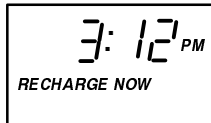

Press and *hold* in the TOUCH - HOLD button until **RECHARGE NOW** starts to flash in the time display area. The softener begins an immediate regeneration, and when over in about two hours, you will have a new supply of soft water. Once started, you cannot cancel this regeneration.

#### **RECHARGE TONIGHT**

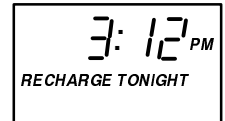

Touch (do not hold) the TOUCH - HOLD button, and **RECHARGE TONIGHT** flashes in the time display area. A regeneration will occur at the next preset regeneration start time. If you decide to cancel this regeneration, touch the same button once more.

### **VACATION NOTE** .....


North Star Demand water softeners regenerate only while water is used and softening capacity must be restored. For this reason, the softener will not regenerate when you are away from home for extended periods.

### **feature: PROGRAM MEMORY** .....

If electrical power to the softener is interrupted, the time display is blank, but the timer keeps correct time for about 6 hours. When power is restored, you

have to reset the present time **only if** the display is flashing. **All** other settings are maintained and never require resetting unless a change is desired.

### **feature: SALT EFFICIENCY** .....

When this feature is ON, the unit will operate at salt efficiencies of 4000 grains of hardness per pound of salt or higher. (May recharge more often using smaller salt dosage and less water). Press and hold SELECT for 3 seconds until 000 shows in the display. As water flows through the softener, the numbers will advance. Then press once and the SALT EFFICIENCY display shows. Use the UP / Down buttons to change the ON / OFF displays. Press SELECT once more to return to normal operation screens. When this is ON the efficiency icon  will

show in the upper right hand corner of the display.

If the time *is* flashing after a long power outage, the softener continues to work as it should to provide you with soft water. However, regenerations may occur at the wrong time of day until you reset the timer to the correct time of day, page 10.



# ☆ NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## ELECTRONIC DEMAND TIMER FEATURES, AND SERVICE, continued

### feature / service: **AUTOMATIC ELECTRONIC DIAGNOSTICS** .....

The timer computer has a self-diagnostic function for the electrical system (except input power and water meter). The computer monitors the electronic components and circuits for correct operation. If a malfunction occurs, an error code appears in the timer display.

that could appear, and possible defects for each code. While an error code is displayed, all timer buttons are inoperable except for the SELECT button. SELECT remains operational so the service person can make the Manual Initiated Electronic Diagnostics to further isolate the defect, and check the water meter.

The following chart (page 19) shows the error codes


POSSIBLE DEFECT	ERROR CODE DISPLAYED				
	Err 01	Err 02	Err 03	Err 04	Err 05
	◆ wiring harness, or connection to switch causing high torque	◆ motor inoperative	◆ position switch	◆ valve defect	◆ timer (PWA)
<b>TO REMOVE AN ERROR CODE:</b> (1) unplug transformer (2) correct defect (3) plug transformer in (4) Wait for at least 6 minutes. The error code will return if the reason for the error code was not corrected.					

### service: **TIMER / SOFTENER, SERVICE CHECKOUT PROCEDURE** .....

If you are not getting soft water, and an error code is not displayed, use the procedures below to find the problem. First, make the following visual checks.

(2) Is there salt in the storage tank? (3) Is the plumbing bypass valve(s) directing water for soft water service? -see page 6- (4) Is the valve drain hose open to the drain, not elevated too high, and unobstructed? If you do not find a problem with the visual checks, continue below.

VISUAL CHECKS: (1) Is there electrical power to the outlet the softener transformer is plugged into?

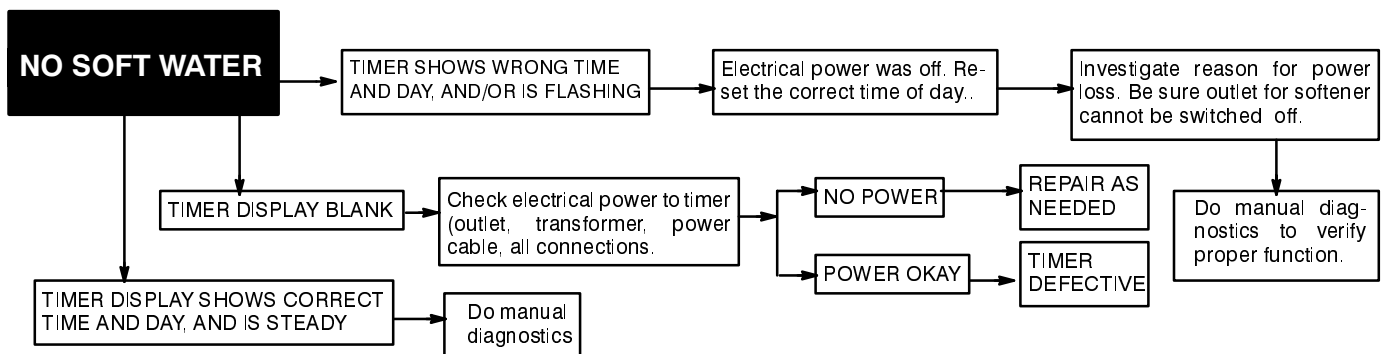


# ★NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## ELECTRONIC DEMAND TIMER FEATURES, AND SERVICE, continued

### service: **MANUAL INITIATED ELECTRONICS DIAGNOSTIC** .....

1. To enter diagnostics, press and hold the SELECT button until (000 - -) shows in the display.

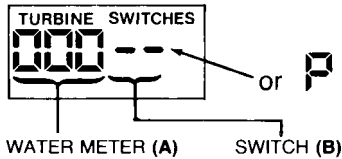


(A) The first 3 digits indicate water meter operation as follows:

◆ 000 (steady) = soft water not in use...no flow through the meter.

— OPEN A NEARBY SOFT WATER FAUCET —

◆ 000 to 199 (continual) = repeats display for each gallon of water passing through the meter.

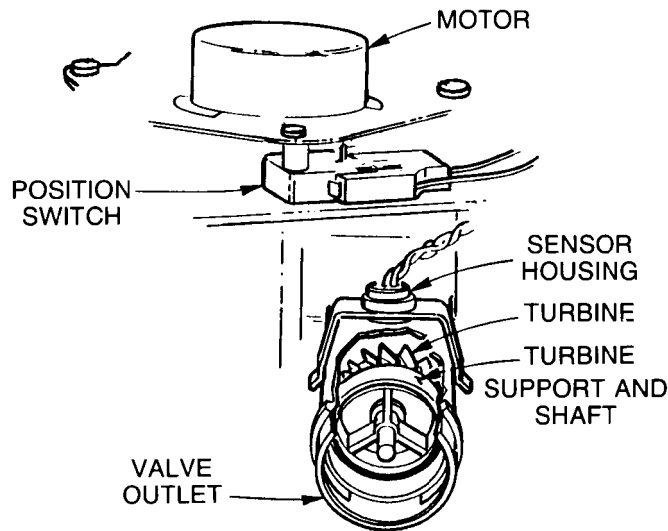

If you don't get a reading in the display, with the faucet open, pull the sensor from the valve outlet port. Pass a small magnet back and forth in front of the sensor. You should get a reading in the display. If you get a reading, unhook the in and out plumbing and check the turbine for binding.

(B) The letter (P) and dash(es) indicate POSITION switch operation. The letter appearing means the switch is closed; the dash means the switch is open.

Use the TOUCH - HOLD (Recharge Tonight - Now) button to manually advance the valve into each cycle and check correct switch operation.


CORRECT SWITCH DISPLAYS	VALVE CYCLE STATUS
- -	Valve in service, fill, brining, backwash or fast rinse position.
- P	Valve rotating from one position to another.

C. While in this diagnostic screen, the following information is available and may be beneficial for various reasons. This information is retained by the computer from the first time electrical power is applied to the face plate.

...Press the UP ▲ button to display the number of days this face plate has had electrical power applied.

...Press the DOWN ▼ button to display the number of regenerations initiated by this face plate since the SR code number was entered.

2. Press the SELECT button and hold in 3 seconds until a Service Rating code appears in the display.

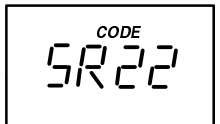

For correct softener operation, the SR number must match the model as follows.

SR22 NST25CD

To reset the code, press the UP or DOWN button until the correct number shows.

3. Press SELECT to return the present time display. If the code was changed, make ALL the timer settings, pages 10 and 11.

NOTE: If the face plate is left in a diagnostic display (or a flashing display when setting times or hardness), present time automatically returns if a button is not pressed within 4 minutes.

# ★NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## ELECTRONIC DEMAND TIMER FEATURES, AND SERVICE, continued


### service: **MANUAL ADVANCE REGENERATION CHECK** .....

This check verifies proper operation of the valve motor, brine tank fill, brine draw, regeneration flow rates, and other controller functions. **First, make the initial checks, and the manual initiated diagnostics.**

**NOTE:** The face plate display must show a steady time (not flashing).

1. Press the TOUCH - HOLD button and *hold* in for 3 seconds. RECHARGE NOW begins to flash as the softener enters the fill cycle of regeneration. Remove the brinewell cover and, using a flashlight, observe fill water entering the brine tank.

◆ If water **does not** enter the tank, look for an obstructed nozzle, venturi, fill flow plug, brine tubing, or brine valve riser pipe.

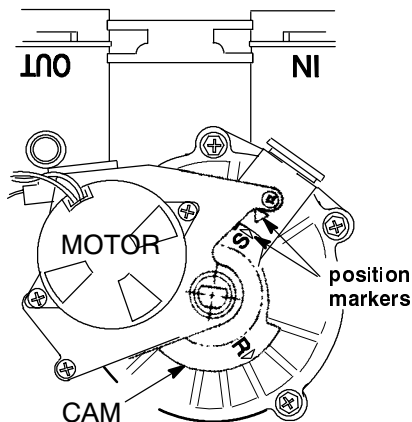

2. After observing fill, press the TOUCH - HOLD button to move the softener into brining. A slow flow of water to the drain will begin. Verify brine draw from

the brine tank by shining a flashlight into the brine-well and observing a noticeable drop in the liquid level.

**NOTE:** Be sure a salt bridge is not preventing water with salt contact.

- ◆ If the softener does not draw brine...
  - ...nozzle and/or venturi dirty or defective.
  - ...nozzle and venturi not seated properly on gasket.
  - ...restricted drain (check drain fitting and hose).
  - ...defective nozzle and venturi seal.
  - ...other inner valve defect (rotor seal, rotor & disc, wave washer, etc.).

**NOTE:** If water system pressure is low, an elevated drain hose may cause back pressure, stopping brine draw.


3. Again, press the TOUCH - HOLD button to move the softener into backwash. Look for a fast flow of water from the drain hose.

◆ A slow flow indicates a plugged top distributor, backwash flow plug, or drain hose.

4. Press TOUCH - HOLD to move the softener into fast rinse. Again look for a fast drain flow. Allow the softener to rinse for a few minutes to flush out any brine that may remain in the resin tank from the brining cycle test.


5. To return the softener to service, press TOUCH - HOLD.

## WIRING SCHEMATIC

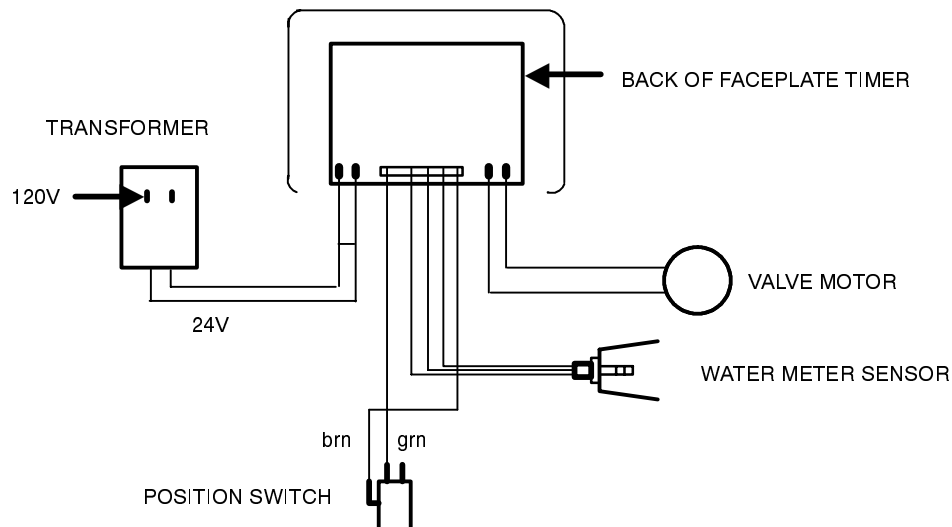


**WATER FLOW THROUGH VALVE**


**SERVICE CYCLE**

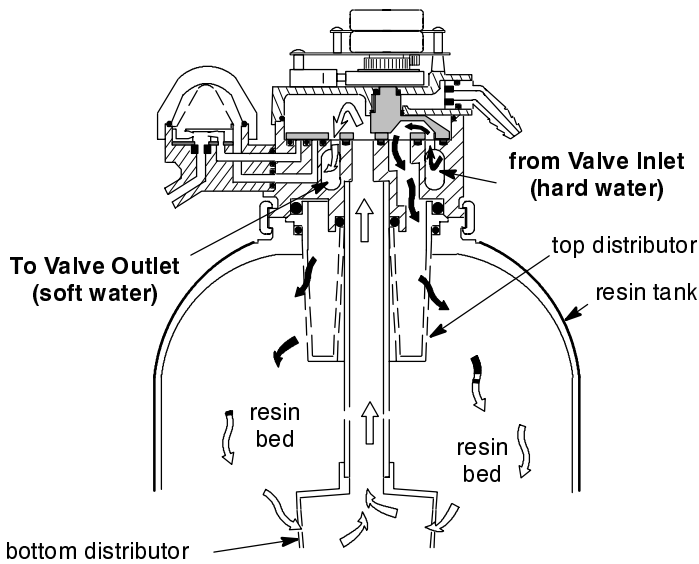

**FILL CYCLE**

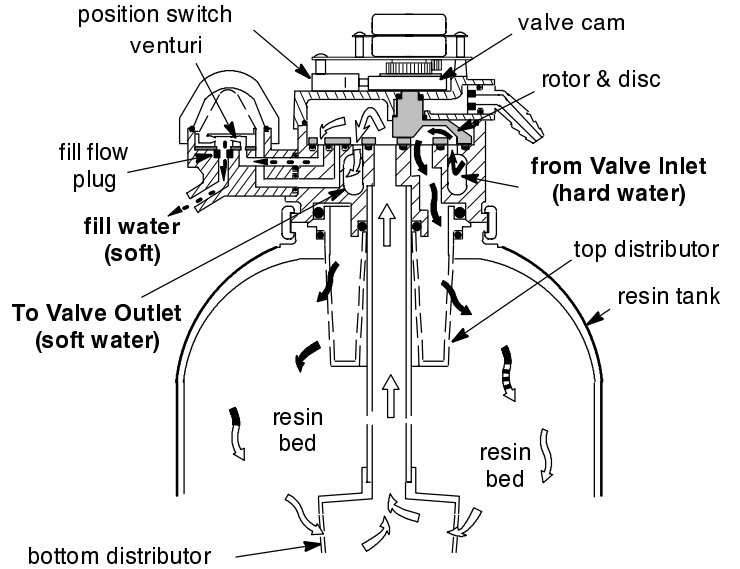


**BRINING and BRINE RINSE CYCLES**

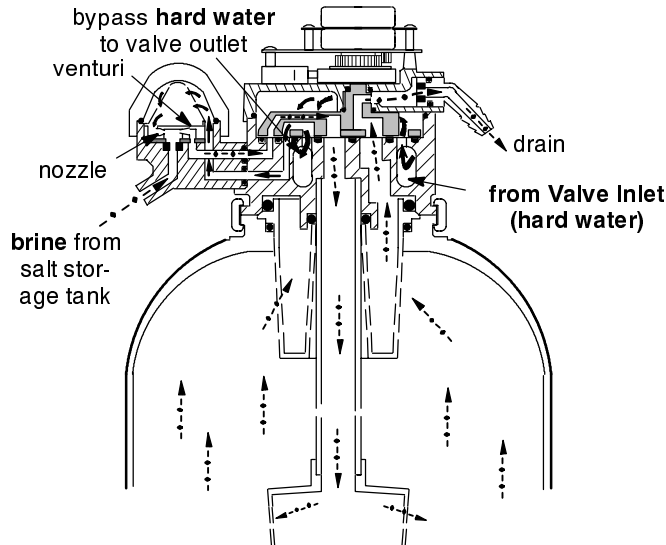


## WATER FLOW THROUGH VALVE

**BACKWASH CYCLE**

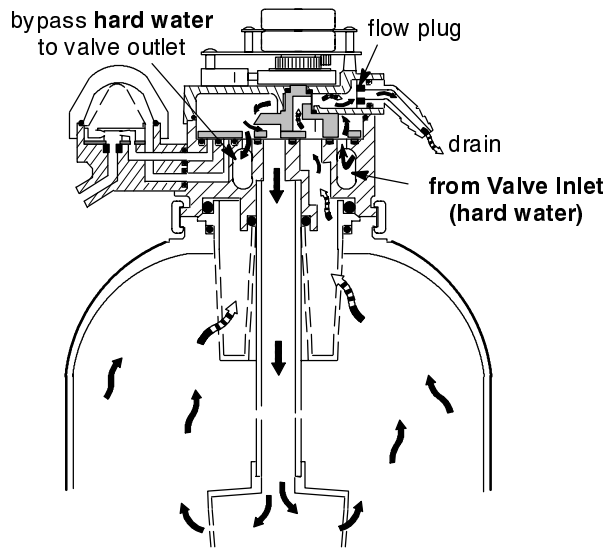

**FAST RINSE CYCLE**

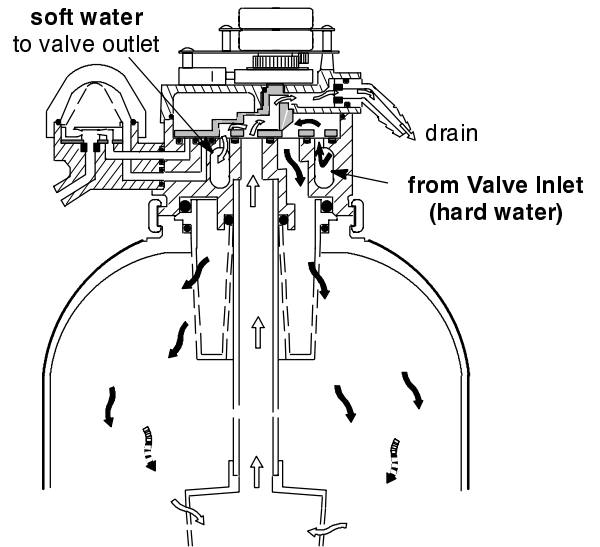


**CYCLE TIMES - MINUTES, electronic demand timer**

	SR22
☆FILL	2 - 9
☆BRINING & BR. RINSE	100
BACKWASH	7
FAST RINSE	3

☆Time varies with the operating level (grains capacity restored) each regeneration.

# ★NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## REPAIR PARTS

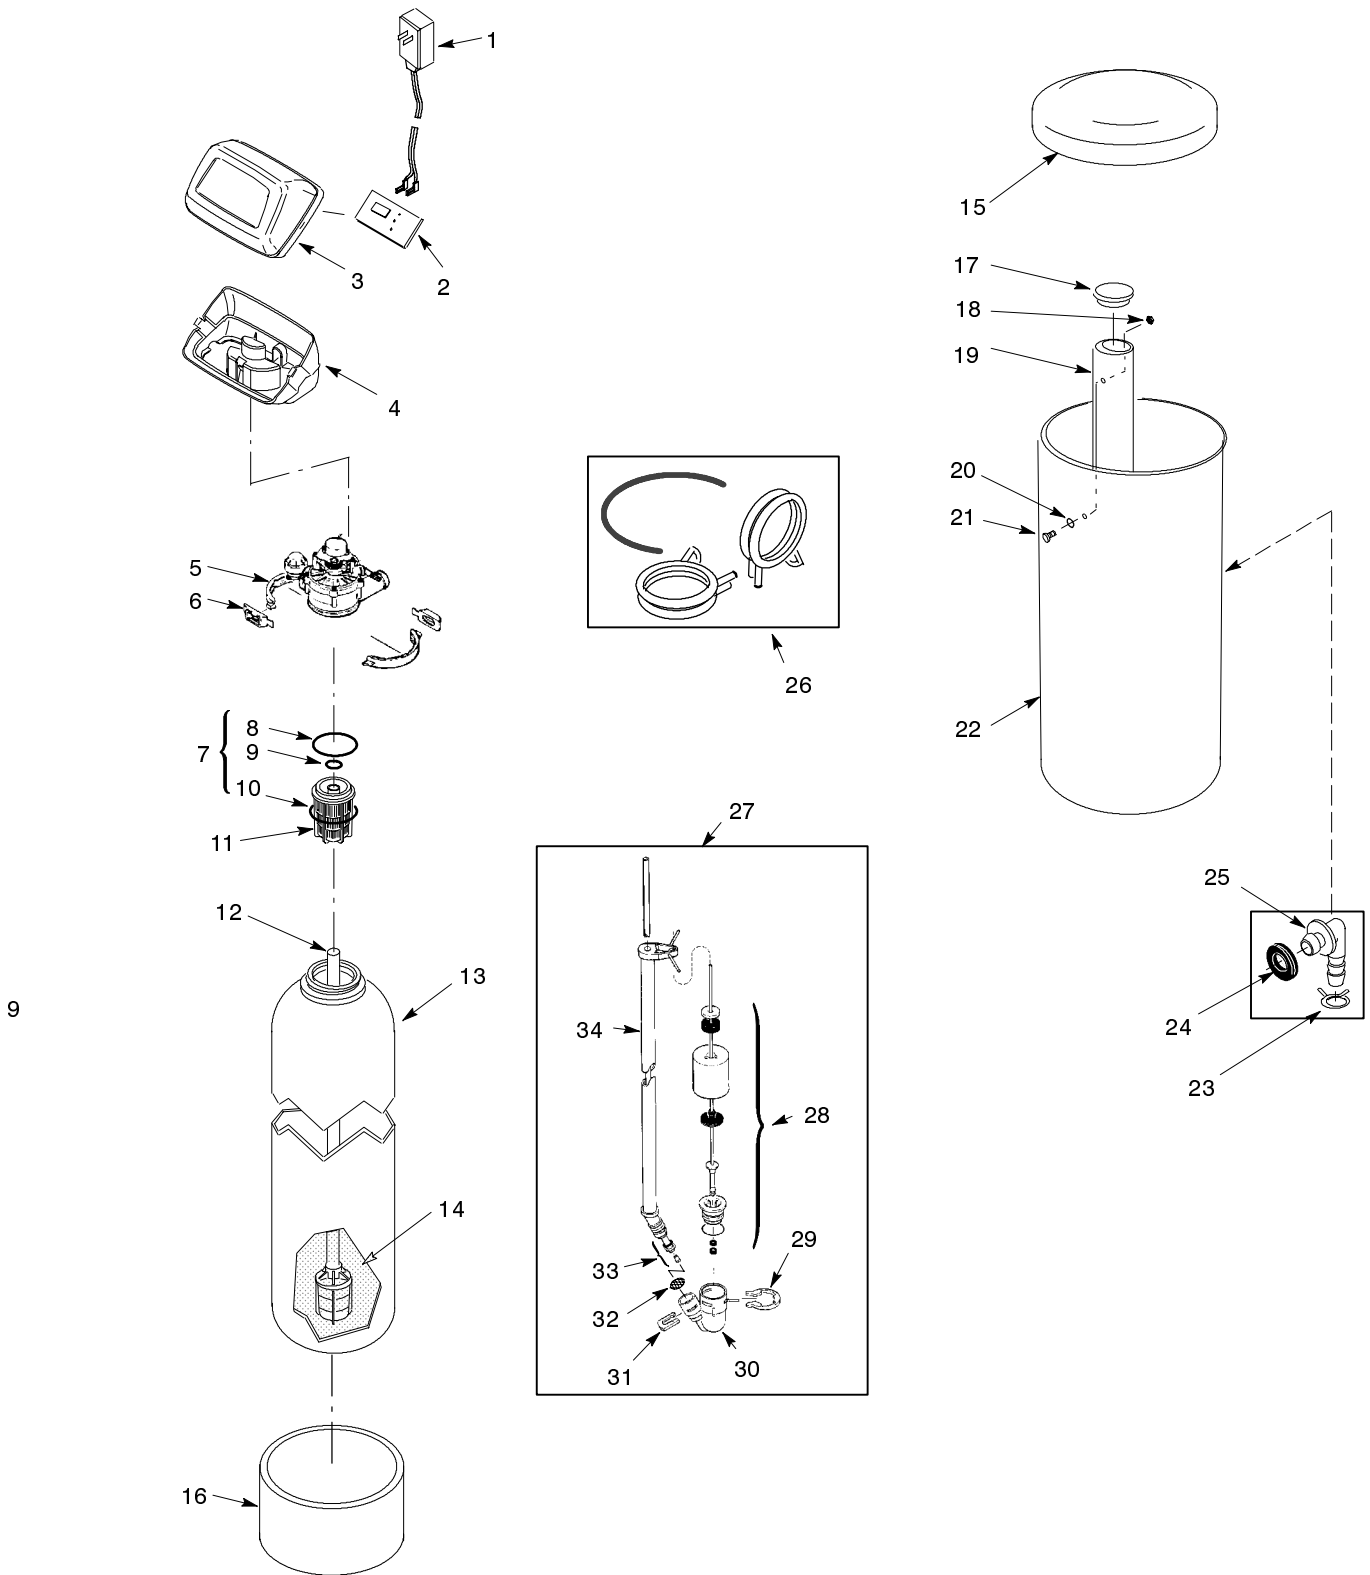


# ★ NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## REPAIR PARTS

KEY NO.	PART NO.	DESCRIPTION OF PART	KEY NO.	PART NO.	DESCRIPTION OF PART
1	7252373	Transformer	17	7155115	Brinewell Cover
2	7221699	Timer (PWA)	18	7082150	Wing Nut, 1/4 – 20
3	7180291	Faceplate Cover (order decal, below)	19	7100819	Brinewell
–	7198040	Decal (for above cover)	20	7003847	O–ring
4	7180314	Bottom Cover	21	7148875	Screw
5	7176292	Clamp Section (2)	22	7112612	Repl. Brine Tank
6	7088033	Clamp Retainer (2)	23	0900431	Hose Clamp
7	7112963	O–ring Seal Kit	24	9003500	Grommet
8	--	O–ring Seal, 2–7/8 in. x 3–1/4 in.	25	1103200	Hose Adaptor
9	--	O–ring Seal, 13/16 in. x 1–1/16 in.	26	7207718	Ground Clamp (2)
10	--	O–ring Seal, 2–3/4 in. x 3 in.	–	7207726	Ground Wire
11	7077870	Top Distributor	27	7116488	Brine Valve Assembly
12	7105047	Repl. Bottom Distributor	28	7113008	Float, Stem & Guide Assembly
13	7113058	Resin Tank, 8 in. dia x 40 in.	29	1205500	Clip
14	0501741	Resin, 26–1/2 lbs (1/2 cu ft)	30	7092252	Brine Valve Body
–	0502272	Resin, 53 lbs (1 cu ft)	31	7080653	Clip
15	7180437	Brine Tank Cover	32	7131365	Screen
16	1183000	Tank Foot	33	7113016	Tubing Assembly
			34	7095470	Brine Tube

# ★ NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## REPAIR PARTS

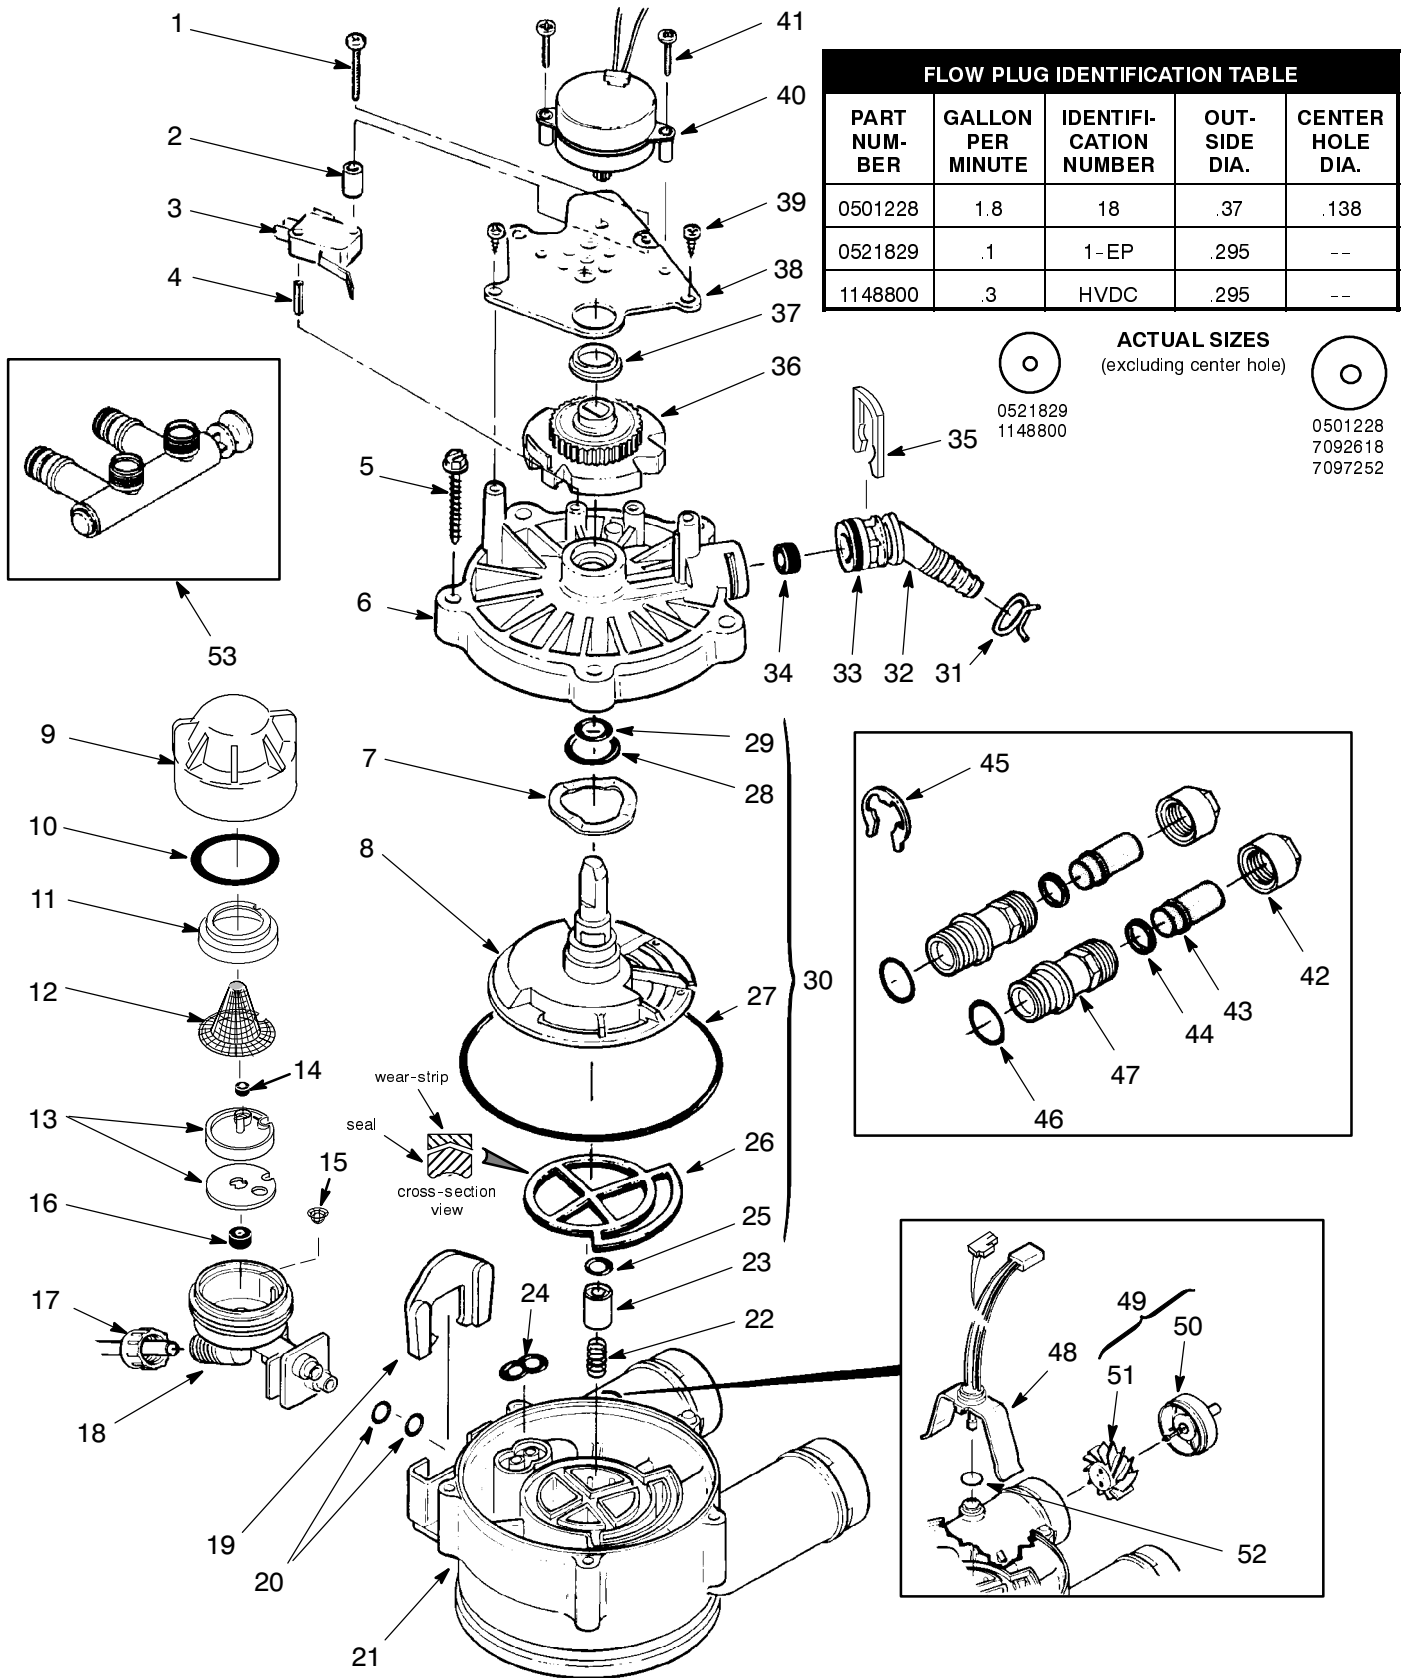

# ★ NORTHSTAR ..... AUTOMATIC WATER CONDITIONER

## REPAIR PARTS

KEY NO.	PART NO.	DESCRIPTION OF PART	KEY NO.	PART NO.	DESCRIPTION OF PART
1	7070412	Screw, #4 – 24 x 1–1/8 in.	27	--	O – ring Seal, 3–3/8 in. x 3–5/8 in.
2	7117816	Spacer	28	--	O – ring Seal, 3/4 in. x 15/16 in.
3	7030713	Switch	29	--	O – ring Seal, 7/16 in. x 5/8 in.
4	7077472	Expansion Pin	30	7129716	Seal Kit – Includes Key Nos. 24 – 29
5	7074123	Screw, #10 14 x 2 in. (5)	31	0900431	Hose Clamp
6	7085263	Valve Cover	32	7024160	Drain Hose Adaptor
7	7082087	Wave Washer	33	7170327	O – ring Seal, 5/8 in. x 13/16 in.
8	7199232	Rotor & Disc	34	0501228	Flow Plug, Backwash / F. Rinse control
9	7199729	Cap	35	7142942	Clip
10	7170262	O – ring Seal, 1.1 in. x 1.4 in.	36	7113927	Cam and Gear
11	7167659	Screen Support	37	0503288	Bearing
12	7146043	Screen	38	7117808	Motor Plate
13	7187772	Nozzle & Venturi, with Gasket Kit	39	0900857	Screw, #6 – 20 x 3/8 in. (2)
--	7190547	Gasket (only)	40	7133008	Motor – Includes Key No. 41
14	0521829	Flow Plug, .1gpm	41	7131755	Screw, #6 – 20 x 7/8 in. (2)
15	7095030	Cone – Screen	42	0507369	Installation Nut (2)
16	1148800	Fill Flow Plug, .3 gpm	43	0507615	Installation Tube (2)
17	1202600	Nut – Ferrule	44	7170335	Washer (2)
18	7187065	Nozzle & Venturi Assembly (Includes key nos. 9 through 16, and 18)	45	7116713	Clip (2)
19	7081201	Retainer	46	7170288	O – ring Seal, 15/16 in. x 1 – 3/16 in. (2)
20	7170319	O – ring Seal, 1/4 in. x 3/8 in. (2)	47	2207800	Installation Adaptor (2)
21	7082053	Valve Body	48	7248714	Sensor Housing/Wiring Assembly
22	7129889	Spring	49	7113040	Turbine and Support Assembly
23	7092642	Plug (Drain Seal)	50	--	Turbine Support
24	--	Seal (Nozzle & Venturi)	51	--	Turbine
25	--	O – ring Seal, 3/8 in. x 9/16 in.	52	0900060	O – ring Seal
26	--	Rotor Seal	53	7129871	Bypass Valve ■

■ Optional, not included with softener.

**PARTS RETURN TAGS**

If you have a defective part or assembly under warranty, please fill in a parts return tag. Cut out the tag and include it with the defective part when you return it to the place where you purchased the conditioner. **To avoid destroying the repair parts information on the reverse side of this page, make a photo copy of the return tags to use.**

<p style="text-align: center;"><b>PARTS RETURN TAG</b></p> <p>_____</p> <p style="text-align: center;">CUSTOMER'S NAME</p> <p>_____</p> <p style="text-align: center;">STREET ADDRESS</p> <p>_____</p> <p style="text-align: center;">CITY                      STATE                      ZIP CODE</p> <p>_____</p> <p>CONDITIONER MODEL NUMBER                      SERIAL NUMBER</p> <p>_____</p> <p>DATE PURCHASED                      DATE PART FAILED</p> <p style="text-align: center;">NORTH STAR 1890 WOODLANE DRIVE WOODBURY, MN 55125</p>	<p style="text-align: center;"><b>PARTS RETURN TAG</b></p> <p>_____</p> <p style="text-align: center;">CUSTOMER'S NAME</p> <p>_____</p> <p style="text-align: center;">STREET ADDRESS</p> <p>_____</p> <p style="text-align: center;">CITY                      STATE                      ZIP CODE</p> <p>_____</p> <p>CONDITIONER MODEL NUMBER                      SERIAL NUMBER</p> <p>_____</p> <p>DATE PURCHASED                      DATE PART FAILED</p> <p style="text-align: center;">NORTH STAR 1890 WOODLANE DRIVE WOODBURY, MN 55125</p>
<p style="text-align: center;"><b>PARTS RETURN TAG</b></p> <p>_____</p> <p style="text-align: center;">CUSTOMER'S NAME</p> <p>_____</p> <p style="text-align: center;">STREET ADDRESS</p> <p>_____</p> <p style="text-align: center;">CITY                      STATE                      ZIP CODE</p> <p>_____</p> <p>CONDITIONER MODEL NUMBER                      SERIAL NUMBER</p> <p>_____</p> <p>DATE PURCHASED                      DATE PART FAILED</p> <p style="text-align: center;">NORTH STAR 1890 WOODLANE DRIVE WOODBURY, MN 55125</p>	<p style="text-align: center;"><b>PARTS RETURN TAG</b></p> <p>_____</p> <p style="text-align: center;">CUSTOMER'S NAME</p> <p>_____</p> <p style="text-align: center;">STREET ADDRESS</p> <p>_____</p> <p style="text-align: center;">CITY                      STATE                      ZIP CODE</p> <p>_____</p> <p>CONDITIONER MODEL NUMBER                      SERIAL NUMBER</p> <p>_____</p> <p>DATE PURCHASED                      DATE PART FAILED</p> <p style="text-align: center;">NORTH STAR 1890 WOODLANE DRIVE WOODBURY, MN 55125</p>